HEAD OFFICE
ul. Chwaszczyńska 135,
81-571 Gdynia, Poland
tel. +48 (58) 669 82 20,
fax +48 (58) 669 82 21
info@flowair.pl

HUVUDKONTOR
ul. Chwaszczyńska 135,
81-571 Gdynia, Polen
tel. +48 (58) 669 82 20,
fax +48 (58) 669 82 21
info@flowair.pl

TS - 3- STEP FAN CONTROLLER WITH THERMOSTAT / TS KONTROLL MED 3-STEGS FLÄKT OCH INBYGGD TEMPERATURGIVARE.

1. MAIN DIMENSIONS / 1. YTTERMÅTT KONTROLL

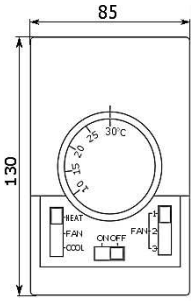

2. WIRING DIAGRAM / 2. KOPPLINGSSCHEMA

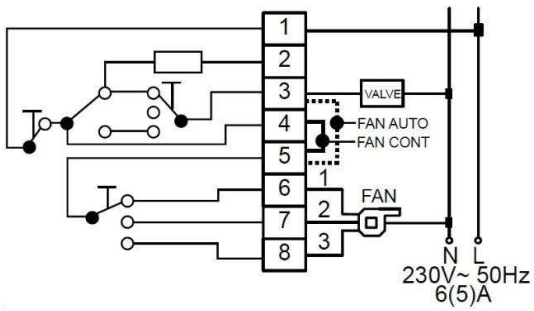

3. TECHNICAL DATA / 3. Teknisk Data

Temperature setting range / Temperaturområde	+10 … +30°C
Operation temperature range / Drifttemperaturområde	0 … +40°C
Protection degree / Kappslingsklass IP	IP30
Contacts current capacity / Strömförbrukning	5A
Power supply / Spänning	230V / 50Hz
Weight / Vikt	200 g
Installation type / Installations område	Surface (wall) / Vägg

4. INSTALATION / 4. Installation

To ensure proper measurements, the controller should be installed at a height of approx. 1.5 m above the ground in a place with good air circulation. Do not place it near heat sources, lighting, air inlets, windows and door openings, etc.

Default connection of TS is CONT* mode connectors 4-5, to switch to AUTO** mode put jumper to connectors 3-5.
*continuous fan work / **fan work depends on thermostat

För att erhålla goda avläsningsvärden skall kontrollen installeras på höjd 1,5m i ett område med god luftcirkulation.
Installera ej kontrollen i närheten av en värme eller ljuskälla eller i närheten av fönster eller en dörröppning etc.

Standard anslutning för TS kontrollen är CONT* vid läge 4-5, önskas auto" läge överbygla då 3-5
*Kontinuerlig körning av fläkt / ** Fläkten kör i samband med temperatursenor

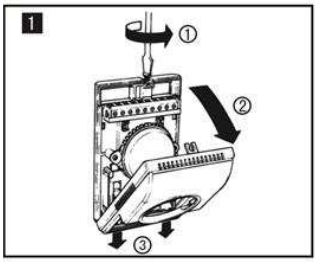

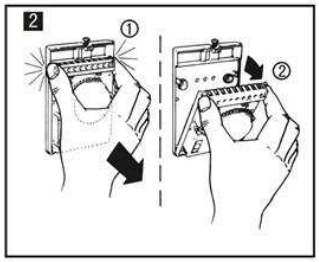

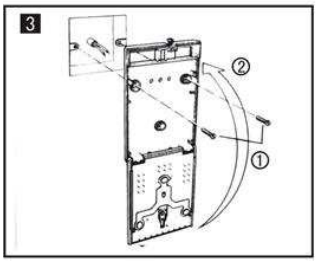

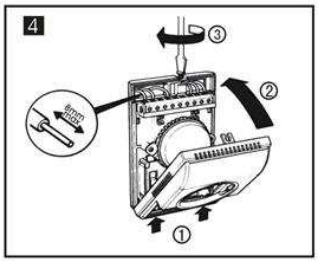

FLOWAIR
intelligent air flow

Handhavande manual TS-Kontroll.
3-Stegsfläkt med inbyggd temperatursensor

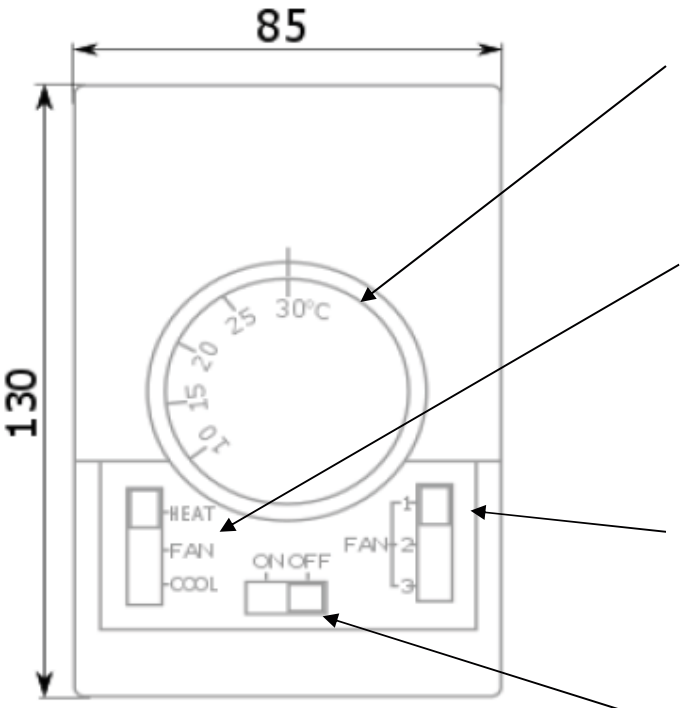

Ställ in önskad rumstemperatur

Ställ in önskat driftläge.
VÄRME-FLÄKT-KYLA

Ställ in önskad hastighet på fläkten.
Hastighet 1-2-3 där hastighet 3 är max.

On/Off knapp för på och avslagning av kontroll.