



EPECON Mounting instruction Vertikal (width 300 - 600)




1. Mark position for bottom and top screws on wall in accordance with drawing

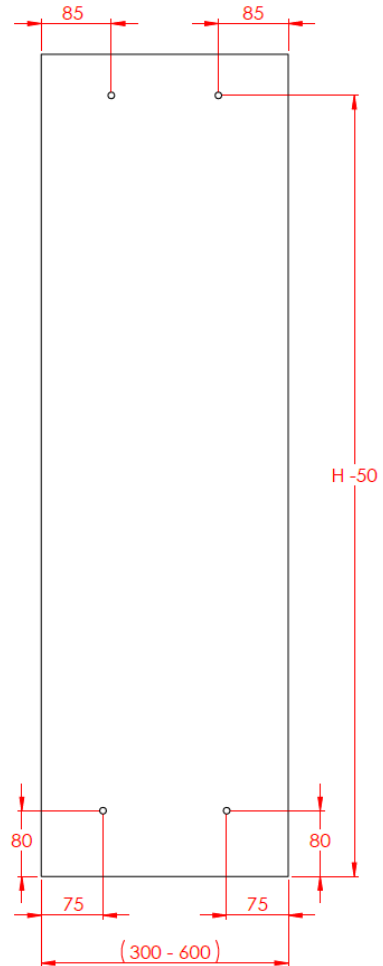



2. Mount lower and upper bracket to the wall

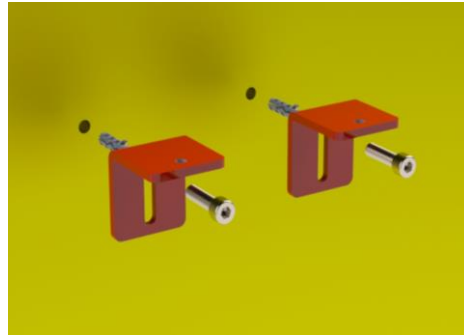

Dowels and screws are not included in the product. Has to be chosen based on wall properties

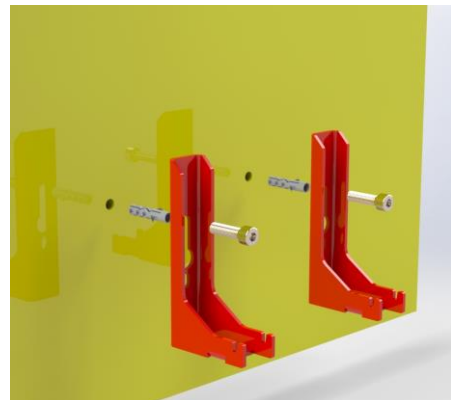

3. Position radiator in lower wall hook and fasten top screw.

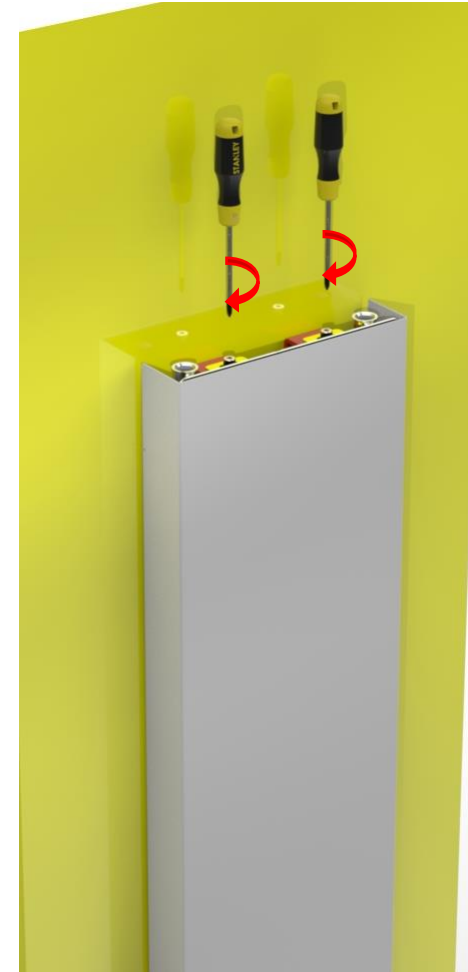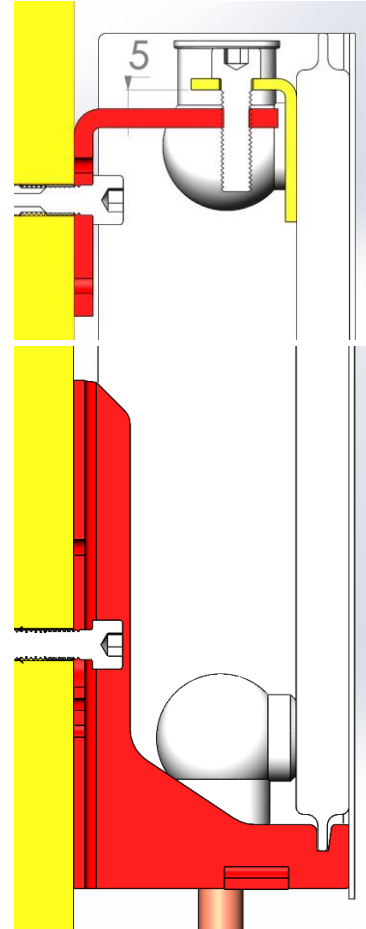

4. Ready to install

